

Discover Adapt 20 - Pairing the headset with a mobile device or a dongle

Pairing the Discover Adapt 20 headset to a mobile device

1. Turn on the headset by pressing and holding the **answer button** for 2 seconds. Release the button when the purple LED flashes 3 times and **"Power on"** is heard in the headset speaker.
2. To start pairing with your device, press and hold the **mute button** for 2 seconds and the blue LED will start flashing.
3. Your device will display **Discover Adapt 20**. Select this to complete the pairing process.


Pairing the Discover Adapt 20 headset to the USB Dongle

1. To pair the Discover Adapt 20 headset to the USB Dongle:
 - a. Firstly, put the Discover Adapt 20 into pairing mode by pressing and holding the mute button on the headset for 2 seconds and the blue LED will start flashing rapidly
 - b. Once you have put the headset in pairing mode, you will need to put the dongle in pairing mode by pressing and holding the button on the back of the dongle for 5 seconds when it is plugged into a USB port of a compatible device and the blue LED will start flashing rapidly
 - c. Please wait for up to 30 seconds for pairing to complete. When connected both the flashing blue LEDs on the headset and dongle should become a solid blue, additionally **"Device connected"** can be heard in the headset speaker.
2. If you would like to pair two devices at the same time, follow the instructions above to put the headset in pairing mode, then activate pairing mode on both devices and they will connect to the headset.

Turn off the headset

Press and hold the answer button for 3 seconds. Release the button when the purple LED flashes 3 times and **"Power off"** is heard in the headset speaker.

For more information, please visit our website <https://www.discoverheadsets.com/manual> to view and download the User Guide.

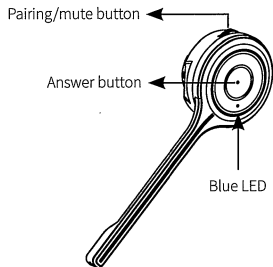

USB Dongle

